





User Manual

Smart Tools



All Software & files can be downloaded from https://www.milesight.com/resources/download-center

# Better Inside, More in Sight

Milesight | www.milesight.com

# Milesight

# **QUICK START GUIDE**

Al Pro Bullet Plus Network Camera



IP VIDEO SURVEILLANCE



## Table of Content

1. Quick Installation Steps 2
2. Hardware Overview 5
3. How to Connect to Alarm Interface
4. How to Connect the Water-proof Connector 9
5. Assigning an IP Address by Using Smart Tools10
6. Assigning an IP Address via Browser11
7. Accessing from the Web Browser11




## 1. Quick Installation Steps


Step 1: Fix a sticker on the position where the camera is intended to be installed:



Step2: Remove the tension disc on the rear cover of the Junction Box (A62). and cut an opening on the rubber plug and get cables through the opening then fasten the rear cover to the ceiling or wall:

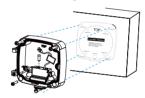


Step3: Install the front cover from the angle near 90° to the rear cover or hang the camera to the bracket:

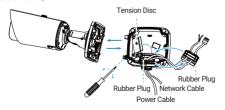

#### Note:

For 5G camera, you need to install the four 5G antennas before installing the front cover to the rear cover or attaching the camera to the bracket.

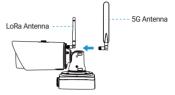


Step4: Adjust the cables length, and connect the cables to corresponding interfaces and fix the tension disc. Close the junction box and fix screws at last. Please remember to plug the small rubber plug whenever the holes on the rubber plug is not in use:






Remember to fix the setscrew tightly.

Step5: Adjust the shooting direction by adjusting the screws as shown in the diagram. Once the camera direction is adjusted, tighten the setscrew to secure the camera orientation.

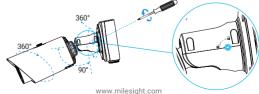




Step6: Take out the mounting screws from the accessory pack and use them to secure the bracket. Adjust the camera angle as desired before finally tightening the bracket.

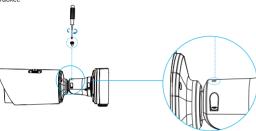


#### Note:

1) Loosen the screws to get access to the SD card slot if you need. Fix the screws again after inserting the SD card.

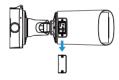

2) For 5G camera, the card slot is used to insert the SIM card. And the SD card slot is located inside the camera body. The replacement of SD card requires disassembling the camera.

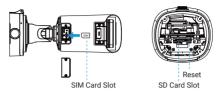

### 2. Hardware Overview

microSD/SDHC/SDXC Card Slot (Nano SIM Card Slot For 5G Camera)



#### **Auto Focus Camera**




Light Sensor



#### Motorized Camera




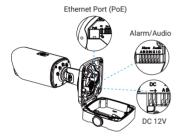


Radar AI LPR Pro Bullet Plus Camera



#### 5A Al Pro Bullet Plus Camera

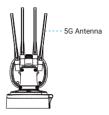

#### 5G AloT Pro Bullet Plus Camera

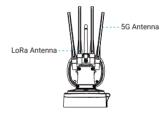

#### Supplement Light AI LPR 4X Pro Bullet Plus Camera







#### Supplement Light AI LPR Motorized Pro Bullet Plus Camera






#### Note:


- 1) Reset Button: Press "Reset" button for 5 seconds, then the device will be restored to factory default:
- 2) DC and PoE are available for AI Pro Bullet Plus Camera's power supply. (PoE is not available for Supplement Light AI LPR 4X Pro Bullet Plus Camera.)

### 3. How to Connect to Alarm Interface

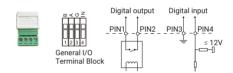

PIN1: Alarm Output NC/NO 24V DC 1A
PIN2: Alarm Output NC/NO 24V DC 1A
PIN3: Alarm Input NC/NO ≤ 12V
PIN4: Alarm Input NC/NO ≤ 12V

### 4. How to Connect the Water-proof Connector

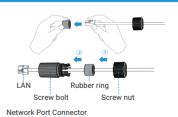





Step1: Get the network cable through the screw nut, rubber ring and the screw holt:

Step2: Insert the rubber ring into the screw bolt;

Step3: Connect the screw nut to the screw bolt;

Step4: Place the O-Ring on the network port connector;


Step5: Connect the RJ45 to the network port connector, tighten the screw bolt and the connector.

#### Note:

Please tightly wrapped all cable-out interface with adhesive tape at last to prevent them from water.

#### 5. Assigning an IP Address by Using Smart Tools

Smart Tools is a software tool which can automatically detect multiple online Milesight network cameras in the LAN, set IP addresses, and manage firmware upgrades. It's recommended to use when assigning IP addresses for multiple cameras.

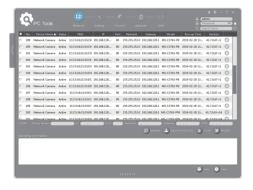

The steps to change the IP of cameras are as below:

- 1) Start Smart Tools, click the IPC Tools page, then enter the device information, such as IP address, MAC address, Port number, Netmask, and Gateway, then all related Milesight network cameras in the same network that will be shown.
- 2) Select a camera or multiple cameras according to the MAC addresses.
- 3) Click "Activate" to set the password when using the cameras for the first time (Password must be 8 to 32 characters long, contain at least one number and one letter), and set three security questions (If you forget the password, you can reset the password by answering three security questions correctly).
- 4) Type the user name and password you set, change the IP address or other network values, and then click "Modify" button.
- 5) By double clicking the selected camera or the browser of interested camera, you can access the camera via web browser directly.

More usage of Smart Tools, please refer to the "Smart Tools User Manual".

#### 6. Assigning an IP Address via Browser



If the network segment of the computer and that of the camera are different, please add some 192.168.5.xx(255.255.25) for your PC to get access to your cameras, more details can be found on "Milesight Network Camera Quick Start".

#### 7. Accessing from the Web Browser

The camera can be used with the most standard operating systems and browsers. The recommended browsers are Internet Explorer, Firefox, Chrome, Safari. More information about the plugin installation, please refer to the troubleshooting:

- 5. Milesight-Troubleshooting-Plugin Installation on Windows-IPC
- 6. Milesight-Troubleshooting-Plugin Installation on MAC

# **AI Pro Bullet Plus**

Thank you for choosing Milesight Product

客户	
机型	B6601
材质	200g铜版纸+80g双胶纸
尺寸	120x85mm
工艺	骑马钉, 封面覆哑膜
编码	43.005.000
版本	V5.0