

Milesight



User Manual



All software & files can be downloaded from  
<https://www.milesight.com/support/download/>

**Make Sensing Matter**

Milesight | [www.milesight.com](http://www.milesight.com)

Milesight

# QUICK START GUIDE

VE0601-A/VE0602-A



---

## Table of Contents

1. Packing List.....	2
2. Hardware Overview.....	2
3. Interfaces.....	3
4. Installation.....	3
5. Device Connection Topology.....	8
6. Ready to Start.....	8

## 1. Packing List



Enterprise NVR  
x1



Quick Start Guide  
x1



Warranty Card  
x1



Power Cord  
x1



HDD Screw  
x28



Mounting Bracket  
x2




Mounting Bracket Screw  
x8




SATA Cable  
x6

## 2. Hardware Introduction

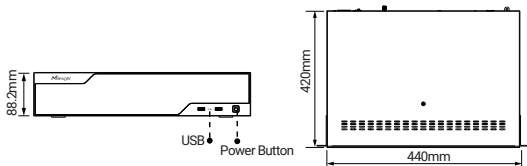


## 3. Interfaces

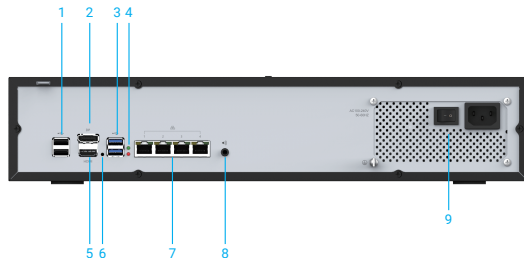


1-USB 2.0	4-Power LED	7-4*2.5Gbps LAN
2-DP Port	5-HDMI Port	8-Audio
3-2*USB 3.0	6-CLRCMOS Button	9-Power

## 4. Installation


**Step1:** Using a cross screwdriver to remove the screws at the rear panel in an anticlockwise direction.

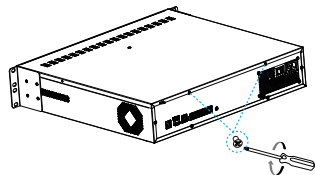


**Step2:** Slide the upper casing to the right first and lift it up.

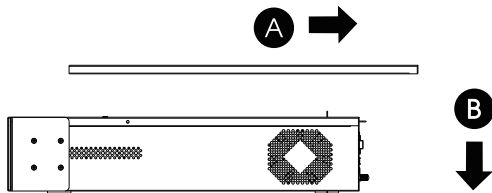


**Step3:** Using the screwdriver to remove two screws in the middle of HDD bracket in an anticlockwise direction.

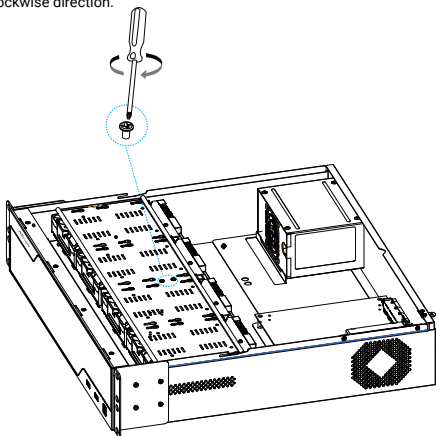


**Step4:** The HDD bracket is rotatable and can be taken down by pulling up and rotating one side of it.

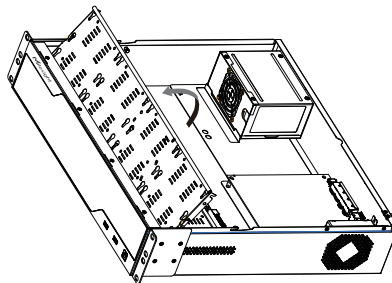


**Step5:** Secure the HDD with 4 screws. Don't screw tight and leave about 1mm distance at the side of each screw nut. As the enlarged drawing shows:

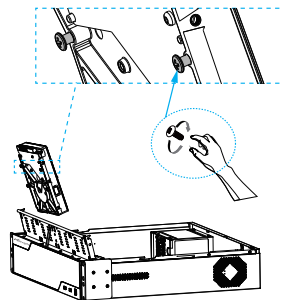


**Step6:** After securing each HDD with 4 screws, stuck the side with screw nuts in the bracket's slots and then slide down to fix the HDD in the bracket. Screw tight with screwdriver.

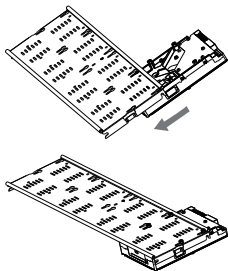


**Step7:** Repeat the above steps to install HDD in the bracket. Remember to check if you have screwed tight.

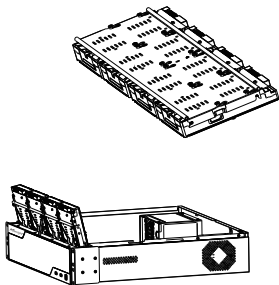


**Step8:** Secure the all screws in HDD and fix the bracket with a screw in the middle of it. Then connect the power cable and data cable to each HDD.

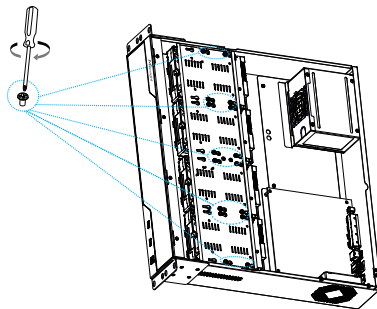


**Step9:** Pull down the upper casing and slide it to the left.

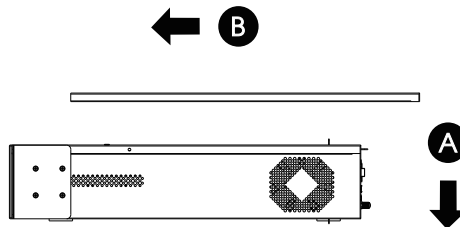

Step10:

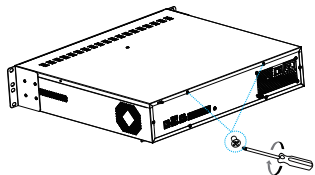

### 5. Device Connection Topology

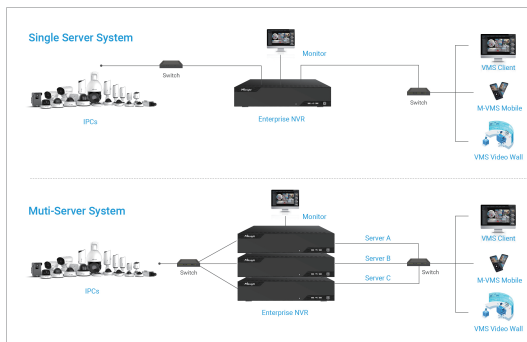

### 6. Ready to Start

When Machine is connected to a power source, it will power up automatically (Power up recovery is enabled by default).

客户	
机型	VE0601-A/VE0602-A
材质	200g铜版纸+80g双胶纸
尺寸	120x85mm
工艺	封面覆哑膜（翻页版）
编码	43.005.000xx
版本	V3.0