



User Manual
(Weather-proof Mini Bullet /
Motorized Bullet)




User Manual
(Vandal-proof Mini Bullet)



Smart Tools

QUICK START GUIDE

Mini Bullet Network Camera Series

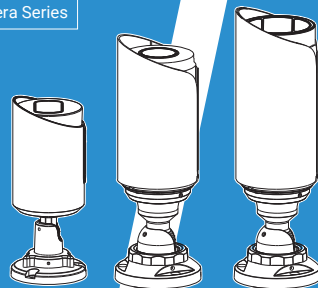

Milesight | *Make Sensing Matter*

📄 Milesight IoT Co., Ltd. 🌐 www.milesight.com/security

Limited Warranty Protection

36 months from original purchase date against all manufacturing defects.

This Warranty does not cover:

- Loss or damage to the equipment due to improper maintenance, or failure to follow operating instructions.
- If defects or damages are caused by the use of unauthorized parts or by service by other than our authorized agent.

Model:

Date of Purchase:

Serial Number:

MAC Address:

Dealer Stamp


For details, please visit our website:

www.milesight.com/security

Table of Contents

1. Package Contents.....	2
2. Hardware Overview.....	3
3. Dimensions	4
4. Installation Steps	6
5. How to Connect to Alarm Interface.....	9
6. How to Connect the Waterproof Connector.....	9
7. Assigning an IP Address by Using Smart Tools	10
8. Assigning an IP Address via Browser	11
9. Accessing from the Web Browser	11
10.FCC Statement	12

1. Package Contents

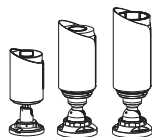

Network Camera x1



Quick Start Guide x 1



Expansion Screw
Packet x 1



Water-proof
Connector x 1
(Only for Cable Out Version)





Cable Seal Ring
(Only for the Junction Box Version
of the Vandal-proof Mini Bullet)



RJ45 Boot
(Only for the Junction Box Version
of the Vandal-proof Mini Bullet)


2. Hardware Overview

Motorized Bullet Network Camera

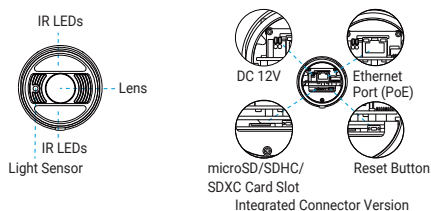


Cable Out Version (Multi-interface)

Vandal-proof Mini Bullet Network Camera




(Cable Out Version)

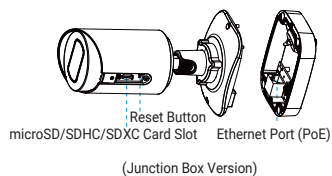


3. Dimensions


Weather-proof Mini Bullet Network Camera

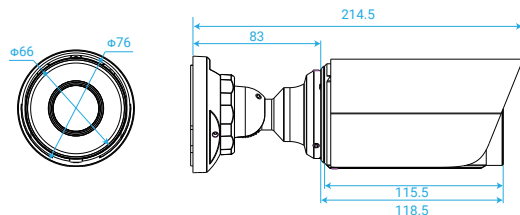

Motorized Bullet Network Camera

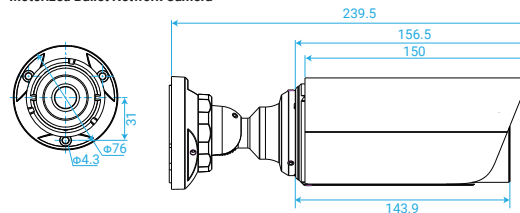

Vandal-proof Mini Bullet Network Camera

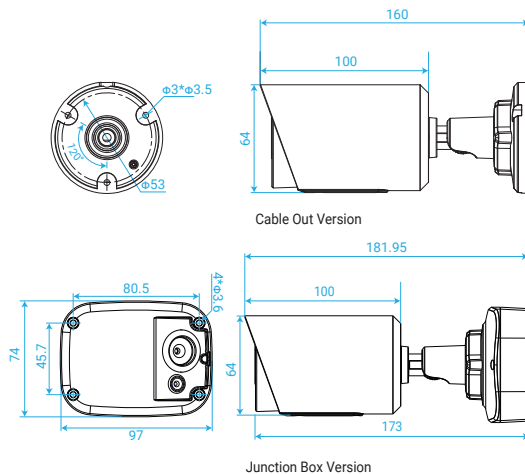

Units:mm


4. Installation Steps

Weather-proof Mini Bullet Network Camera/ Motorized Bullet Network Camera

Step 1: Loosen the waterproof connector, and then remove the rubber seal and the waterproof connector;


Step 2: Loosen and open the rear cover, then install a microSD/SDHC/SDXC card;

Step 3: Thread the Ethernet cable (or the pigtail) sequentially through the center of the mounting bracket, cap nut, rubber seal and rear cover for wiring connection.

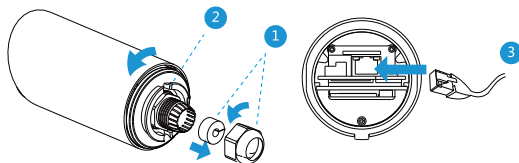


Step 4: Install and tighten the rear cover;

Step 5: Tighten the plastic connector, rubber seal, and cap nut of the waterproof connector;

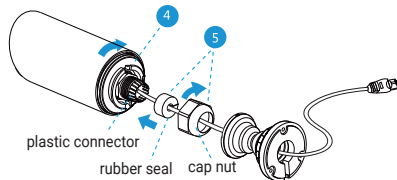


Step 6: Put the bracket and camera together, rotate the bracket and fasten it using screws;

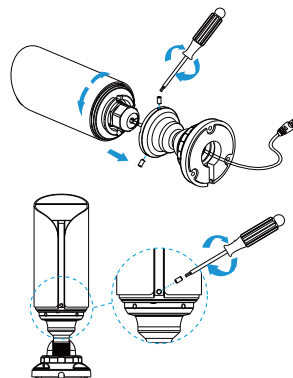

Vandal-proof Mini Bullet Network Camera

Step 1: Connect the cables to the corresponding interface on the rear cover of the Junction Box. Then fix the rear cover at the position where it is intended to be installed. The rear cover can be fixed in the following two ways:


- 1) Fix the rear cover directly;
- 2) Fix the rear cover via a bracket;

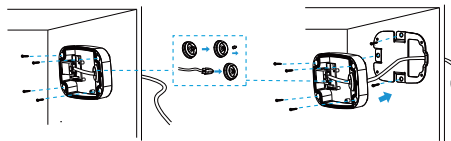

Note:


The bracket is optional, which can be applied in special scenarios that require screws of larger sizes.

Step 2: When the front cover is correctly fixed to the rear cover, the camera will be powered on by contact power supply. Adjust shooting direction and rotate the locking ring.

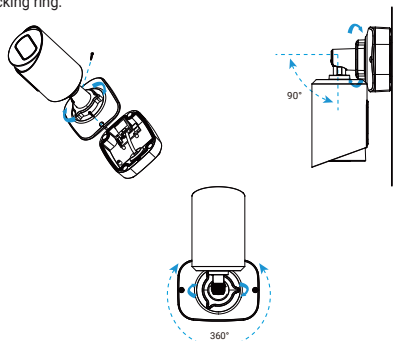


Note:

Loosen the screws of SD Card structure to get access to the SD card slot if you need. Fix the screws again after inserting the SD card to complete the operation.

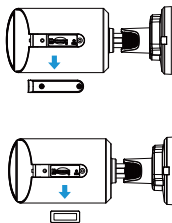

5. How to Connect to Alarm Interface

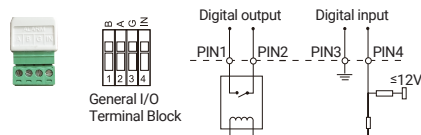


PIN1: Alarm Output NC/NO 24V DC 1A

PIN2: Alarm Output NC/NO 24V DC 1A

PIN3: Alarm Input NC/NO $\leq 12V$

PIN4: Alarm Input NC/NO $\leq 12V$

6. How to Connect the Waterproof Connector

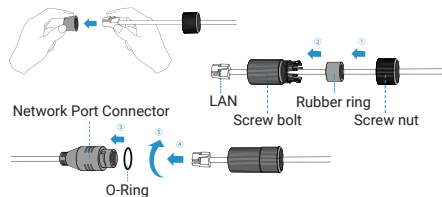

Step 1: Get the network cable through the screw nut, rubber ring and the screw bolt;

Step 2: Insert the rubber ring into the screw bolt;

Step 3: Connect the screw nut to the screw bolt;


Step 4: Place the O-Ring on the network port connector;

Step 5: Connect the RJ45 to the network port connector, tighten the screw bolt and the connector.

Note: Please wrap all cable interfaces tightly with adhesive tape to prevent water ingress.

7. Assigning an IP Address by Using Smart Tools

Smart Tools is software that automatically detects multiple Milesight network cameras online in the LAN, configures their IP addresses, and manages firmware upgrades. It is recommended for assigning IP addresses to multiple cameras.

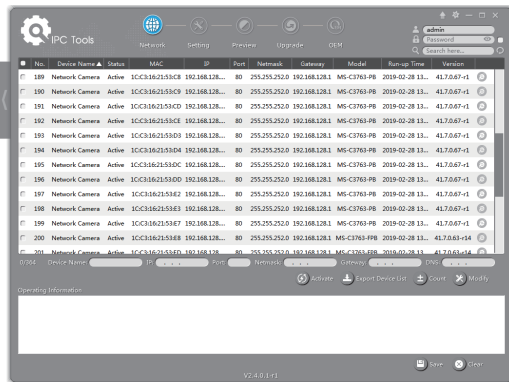

The procedure to change the IP address of cameras is as follows:

- (1) Start Smart Tools and open the IPC Tools page. Enter the device information (IP address, MAC address, port number, netmask, and gateway). The software will then automatically display all Milesight network cameras detected on the same network.
- (2) Select one or more cameras according to the MAC addresses.
- (3) Click **Activate** to set a password when using the camera for the first time. Then configure three security questions. (If you forget the password, you can reset it by answering the security questions correctly.)
- (4) Enter your configured username and password, modify the IP address or other network parameters, and click **Modify**.
- (5) Double-click the selected camera or its browser icon to access the camera directly via the web browser.

For more information on using Smart Tools, please refer to the *Smart Tools User Manual*.

8. Assigning an IP Address via Browser

If the PC and the camera are on different network segments, please add an IP address in the 192.168.5.xx (255.255.255.0) range to your PC to access the cameras. For details, refer to the *Milesight Network Camera Quick Start Guide*.

9. Accessing from the Web Browser

The camera is compatible with most standard operating systems and web browsers. Recommended browsers include Internet Explorer, Firefox, Chrome, and Safari. For details on how to install plugins, you can visit <https://support.milesight.com>, choose **Solutions**, and enter **Plugin-Free Mode & Mplayer Plugin** in the search box. You can also scan the QR code below for more information.



10. FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.