



Wireless AI Occupancy Sensor

VS321

User Guide




Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- ❖ The device must not be disassembled or remodeled in any way.
- ❖ To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installation.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ The device must never be subjected to shocks or impacts.
- ❖ Make sure the device is firmly fixed when installing.
- ❖ Do not expose the device to where laser beam equipment is used.
- ❖ Use a soft, dry cloth to clean the lens of the device.


Declaration of Conformity

VS321 is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.

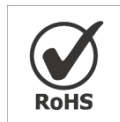

Copyright © 2011-2025 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

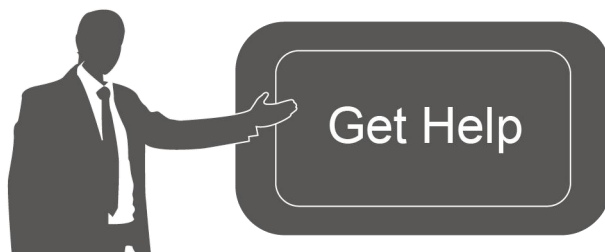

For assistance, please contact

Milesight technical support:

Email: iot.support@milesight.com

Support Portal: support.milesight-iot.com

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: Building C09, Software Park
Phase III, Xiamen 361024,
China

Revision History

Date	Doc Version	Description
Jun. 23, 2025	V1.0	Initial version

Contents

1. Product Introduction	5
1.1 Overview	5
1.2 Packing List	5
1.3 Hardware Overview	6
1.4 Button and LED Indicators	6
2. Power Supply	6
3. Installation	8
3.1 Recommended Scenarios	8
3.2 Preparation before Installation	8
3.2.1 Installation Requirements	8
3.2.2 Covered Detection Area	9
3.3 Installation Step	10
3.3.1 Screw Installation	10
3.3.2 Adhesive Backed Installation	11
4. Operation Guide	13
4.1 Bluetooth Configuration	13
4.2 General Setting	13
4.2.1 People Counting	15
4.2.2 Desk Occupancy	17
4.2.3 Other Settings	20
4.3 Threshold Setting	26
4.4 Network Settings	26
4.4.1 LoRaWAN® Settings	26
4.4.2 Milesight D2D Settings	29
4.5 Maintenance	30
4.5.1 Backup	30
4.5.2 Upgrade	33
4.5.3 Reset	34
5. Communication Protocol	35
5.1 Uplink Data	35
5.1.1 Basic Information	35
5.1.2 Periodic Report	36
5.1.3 Alarm Report	37
5.1.4 Historical Data	38
5.2 Downlink Data	39
5.2.1 General Setting	39
5.2.2 Threshold Setting	40
5.2.3 LoRaWAN® Setting	41
5.2.4 Milesight D2D Setting	41
5.2.5 Historical Data Enquiry	42

1. Product Introduction


1.1 Overview

VS321 is a low-power, battery-operated wireless occupancy sensor empowered by advanced AI algorithms. It achieves up to 95% occupancy detection accuracy powered by its AI algorithm. It is equipped with built-in temperature, humidity, and ambient light sensors to provide comprehensive environmental monitoring. Its wire-free design enables effortless and flexible installation.


With simple configuration and wireless detection, VS321 can be integrated with the Milesight LoRaWAN® gateway and Milesight Development Platform, enabling remote monitoring, data visualization, and centralized management. As a Milesight D2D controller, VS321 seamlessly communicates with other Milesight D2D devices, peer-to-peer interaction without gateway dependency.

VS321 can be used in scenarios such as meeting rooms, offices, and campuses to detect space occupancy or personnel activity.

1.2 Packing List

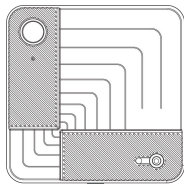


1 × VS321 Device

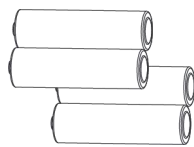


4 × ER14505 Li-SOCl₂
Batteries




1 × Mounting Bracket



4 × Ceiling Mounting
Screws Kits

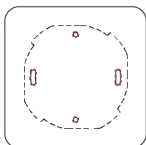

1 × Installation
Positioning Sticker

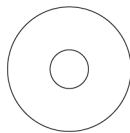

1 × Adhesive Backing



1 × Quick Guide




1 × Warranty Card



If any of the above items is missing or damaged, please contact your sales representative.

1.3 Hardware Overview

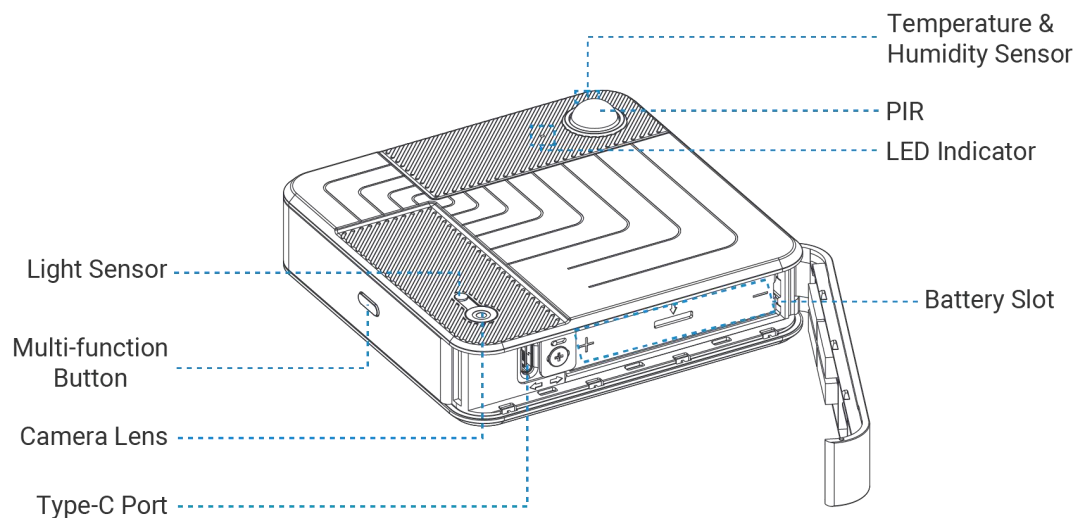


1.4 Button and LED Indicators


Function	Action & Description	LED Indication
Power On	Put the batteries in	/
Power Off	Remove batteries	
Confirm Device Status	Short press the Multi-function button once	Power On: Lights up Power Off: Lights off
Turn On Bluetooth	Press and hold the Multi-function button for over 3s	Blinks Slowly
Turn Off Bluetooth		Stays on
Reset to Factory Defaults	Press and hold the Multi-function button for over 10s	Blinks Quickly
Device Upgrade	Upgrading (takes about 4~5 mins)	Upgrading & Upgrade failed: Stays On
		Upgrade Success: Lights off

2. Power Supply


Step 1: The battery cover can be opened automatically by gently pulling the Access Pull Tab in the direction shown in ①. After the first use, users can decide whether to remove the Access Pull Tab or not according to the actual needs. If you want to open the battery cover again after removing the Access Pull Tab, please refer to the direction shown in ② and gently open it with your finger.

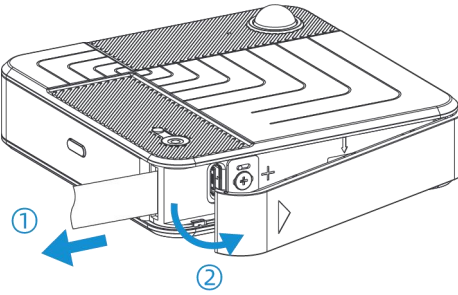


Step 2: Remove the Battery Retention Latch and tilt the device appropriately according to the direction of ① in the illustration, and the batteries will slide out smoothly.

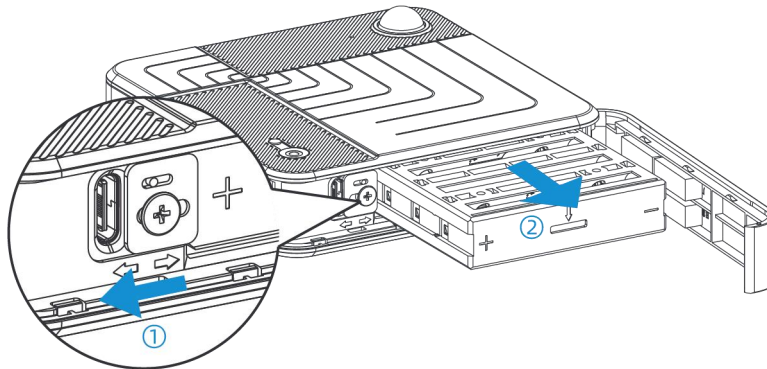

Step 3: Please remove the batteries from the box and install them correctly into the battery slot according to the polarity markings on the battery slot.

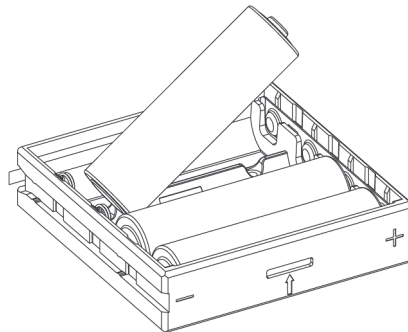

Step 4: Place the battery slot with the batteries already installed inside the device and reset the Battery Retention Latch in the direction of ② in the illustration to prevent the battery from slipping out. Finally, close the battery cover to ensure a secure installation.

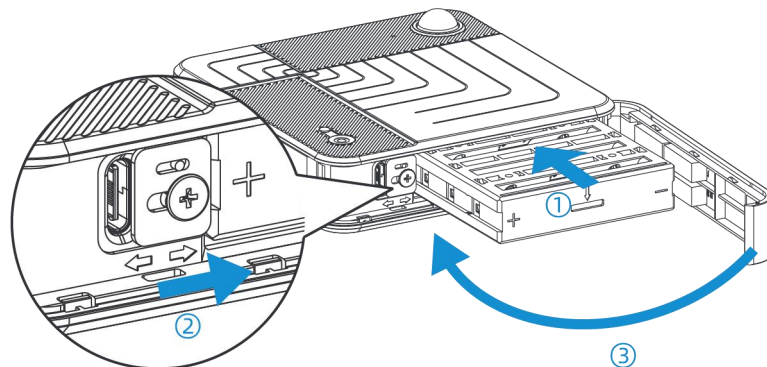

Step 5: Short press the multi-function button, if the green light is on, it means that the device has been successfully powered up.

Note:

- The device only supports ER14505 Li-SOCl₂ batteries, and does not support the use of alkaline batteries.
- If the device has not been used for a long period of time, please remove the batteries, otherwise it may cause battery leakage and damage internal components.
- When replacing the batteries make sure that all batteries are new, otherwise it may result in shorter battery life or abnormal power calculations.

3. Installation

3.1 Recommended Scenarios

Recommendation	Scenarios
Most Recommended	Meeting Room (Refer to Covered Detection Area)
	Office Desk (4~8 desks)
	Study Room (4~8 desks)
	Library (4~8 desks)
Medium Recommended	Large meeting rooms (>40m ²)
	Classroom
	Open Office Scenarios
Not Recommended	Retail Scenarios

Note:

- 1) The reference area size is for 1 device unit. If your scenarios are large, please install multiple units.
- 2) If your scenarios are not listed above, please enquire Milesight for details.

3.2 Preparation before Installation


3.2.1 Installation Requirements

Installation Conditions: Ceiling Thickness > 3cm

Recommended Height: For sedentary targets, recommended height > 2.2m; for standing targets, recommended height > 3m

Installation Position: Position the device lens at the exact center of the detection area.

If the detection area is rectangular, the lens's long side should align with the long side of the detection area, and the short side should align with the short side.

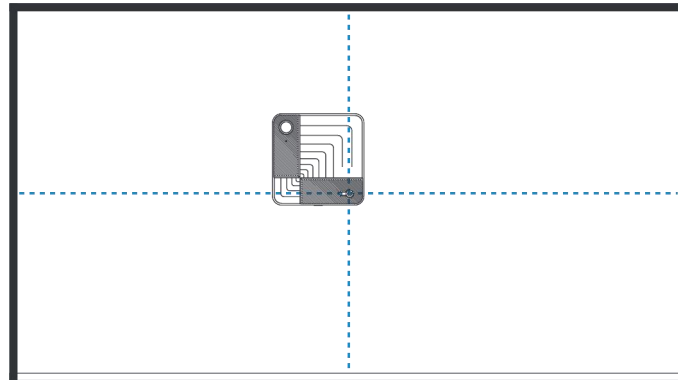

Installation Note:

- Do not install the device too close to doors or mirrors.
- Ensure that the device is facing downward toward the detection area.
- Ensure that the surrounding environment is well-lit (>50 lux), while avoiding interference from bright lights.

3.2.2 Covered Detection Area

Recommended Height	Effective Detection Area	Optimal Detection Area
2.4m	2.6m × 5.0m	1.4m × 3.0m
2.5m	2.3m × 5.2m	1.6m × 3.6m
2.6m	2.6m × 5.6m	1.8m × 4.0m
2.7m	2.8m × 6.1m	2.0m × 4.3m
2.8m	3.1m × 6.3m	2.1m × 4.6m
2.9m	3.4m × 6.8m	2.3m × 5.0m
3.0m	4.0m × 7.2m	2.3m × 5.0m
3.1m	4.0m × 7.6m	2.7m × 5.7m
3.2m	4.1m × 8.0m	2.9m × 6.0m
3.3m	4.4m × 8.4m	3.0m × 6.4m
3.4m	4.7m × 8.7m	3.3m × 6.7m
3.5m	5.0m × 9.0m	3.3m × 7.4m
3.6m	5.2m × 9.5m	3.0m × 7.5m
3.7m	5.5m × 9.8m	3.8m × 7.8m
3.8m	5.7m × 10.2m	4.0m × 8.1m
3.9m	6.0m × 10.6m	4.2m × 8.4m
4.0m	6.0m × 11.0m	4.6m × 8.7m


Parameters	Description
Effective Detection Region	The area within which the sensor can identify object presence.
Optimal Detection Region	The area that can be detected with greater than 95% accuracy.

3.3 Installation Step

Note: Check that the device and accessories are complete according to the **Quick Start Guide** in the unit's box.


3.3.1 Screw Installation

Step 1: Take out the positioning stickers from the packing list, peel off the protective film, and apply the stickers to the installation area.

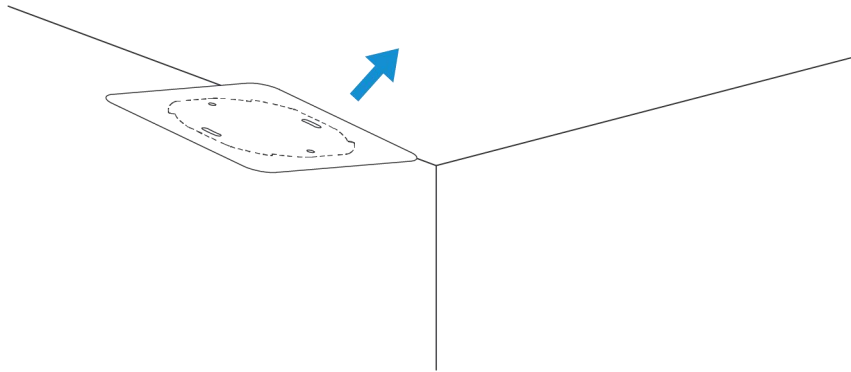


Step 2: Install Mounting Bracket


- 1) Drill two holes (6mm diameter) at the installation location.
- 2) Align the bracket using the two oval holes and fix it temporarily.
- 3) Insert wall plugs into the holes and fasten the bracket with screws.
- 4) Temporarily install the device and use the ToolBox to check its field of view. Adjust and rotate the bracket as needed until the view is correct.
- 5) Once aligned, mark and drill two additional holes (6mm diameter) through the two round holes.
- 6) Insert wall plugs into these new holes, then secure the bracket by tightening screws through the round holes.

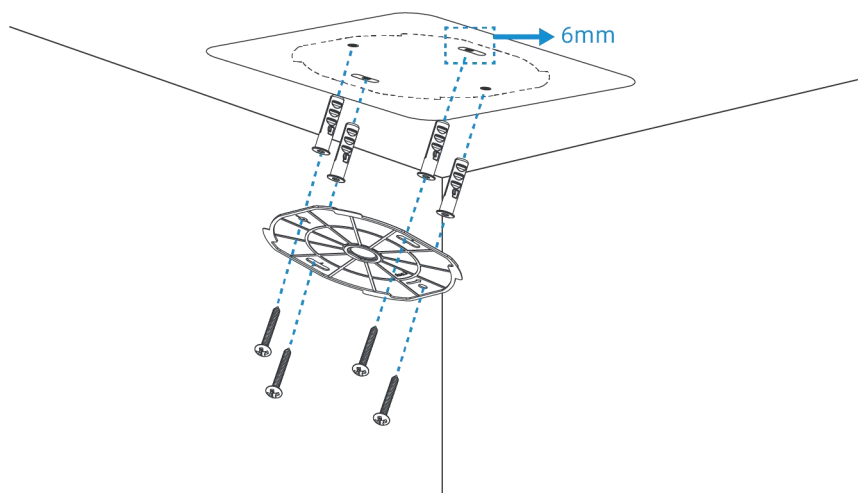


Step 3: Hold both sides of the device with your hands. Align the slots on the back of the device with the hooks on the bracket.

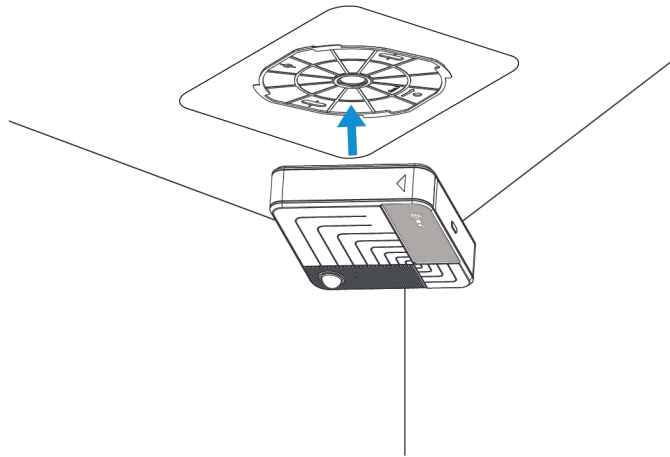

Step 4: Rotate the device clockwise until you hear a clear “click” sound. Gently pull on the device to ensure it does not move, confirming that the installation is secure.

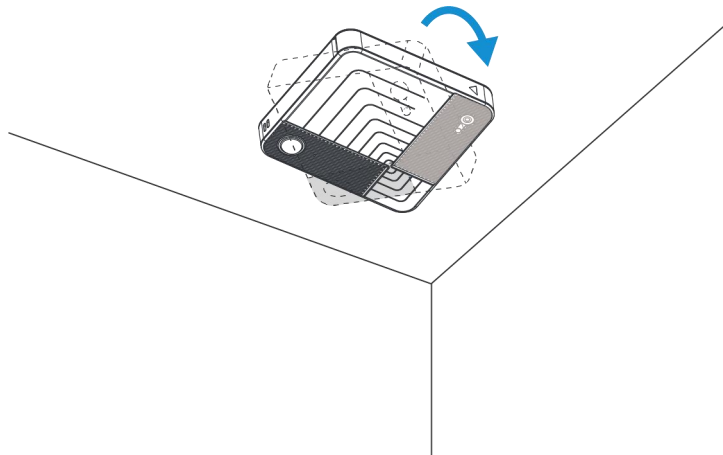


Step 5: Remove the lens film and ready to use.

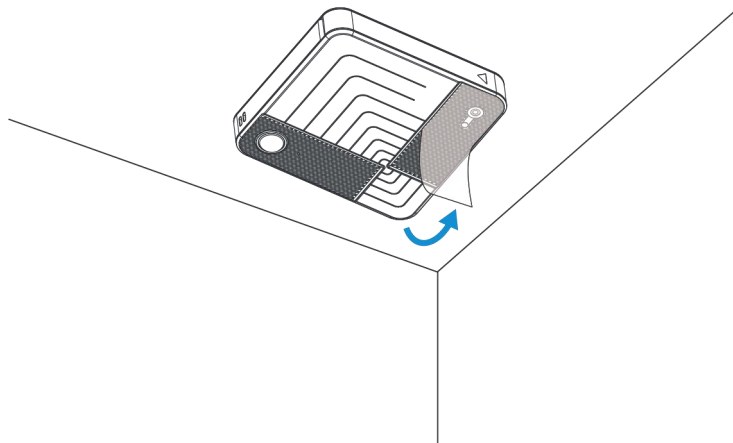


3.3.2 Adhesive Backed Installation


Step 1: Take out the adhesive backing from the packing list, peel off the protective film, and apply adhesive backing to the mounting bracket.

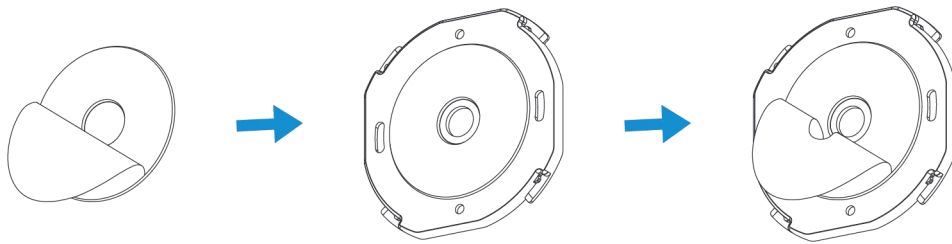


Step 2: Use the installation positioning sticker to mark the positions of the 4 holes as need. Afterwards, remove the sticker to ensure the adhesive backing adheres seamlessly to the wall.

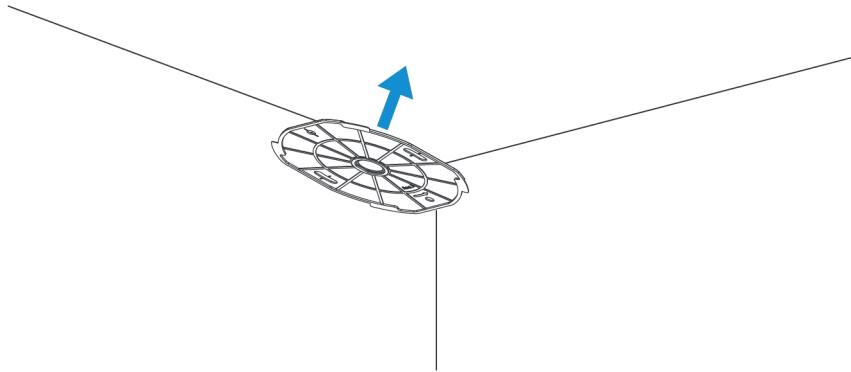


Step 3: Hold both sides of the device with your hands. Align the slots on the back of the device with the hooks on the bracket.

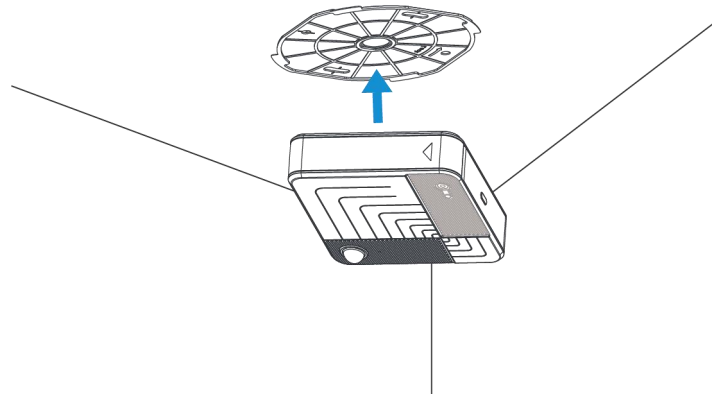

Step 4: Rotate the device clockwise until you hear a clear “click” sound. Gently pull on the device to ensure it does not move, confirming that the installation is secure.

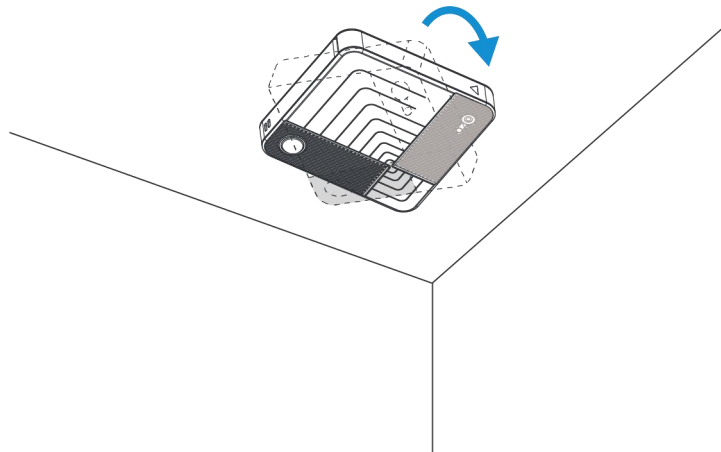


Step 5: Remove the lens film and ready to use.

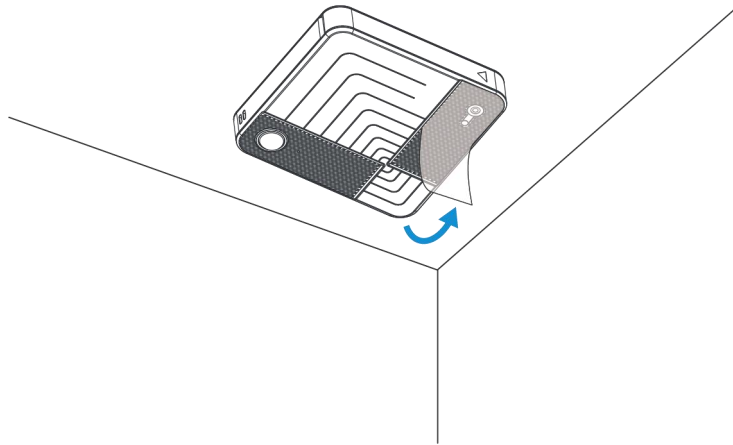

4. Operation Guide

4.1 Bluetooth Configuration


1. Download and install “Milesight ToolBox” App on an Bluetooth-supported smartphone.
2. Enable Bluetooth and location function on the smartphone.
3. Open “Milesight ToolBox” App and switch the reading mode to “Bluetooth”. Tap “Bluetooth Read” to automatically search for nearby devices to connect. The default Bluetooth name is VS321-XXXXXXX(5th to 11st of device SN) and the default login password is 123456.
4. When connecting to Bluetooth for the first time, you need to set the Bluetooth password. After the setup is completed, you can get the basic information of the product.

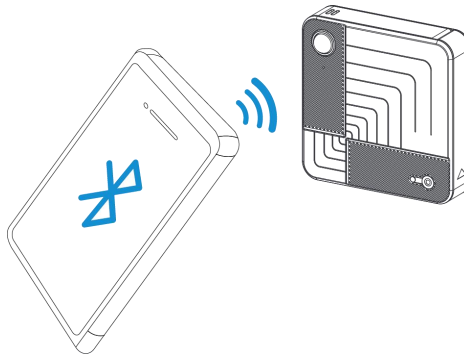

Note:

- 1) The Bluetooth connection will be terminated if there's no data interaction within 3 minutes. It will request to connect again.
- 2) The device can connect to only one smartphone via Bluetooth at a time. For example, if the device is connected to Smart phone A via Bluetooth, the connection will be terminated after it is connected to Smartphone B.

4.2 General Setting

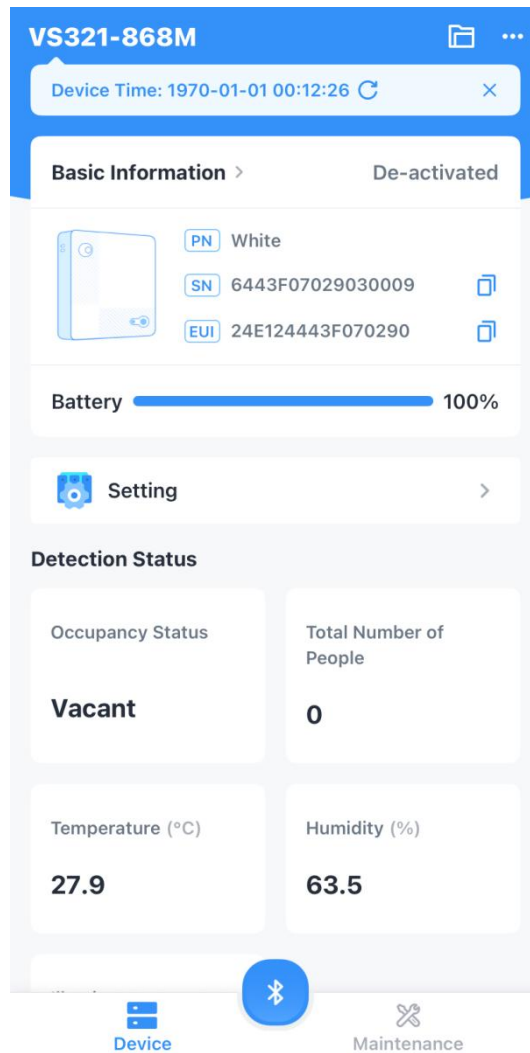

Parameters	Description
	Click to synchronize time, disappears after first click.
	Basic information page of the device.
	Configuration information for the device, including general settings and communication settings.
	Status display page, which presents different information depending on the mode.
	Tap to read device again or replace connected Bluetooth device.



Maintenance

Maintenance settings page, for details see [Maintenance](#).

4.2.1 People Counting

People Counting mode counts the total number of people in the detection regions.

Step 1: Choose Detection Function as **People Counting**. Set up [detection-related parameters](#).


Step 2: Click **Edit** to draw Detection Regions. Up to 10 detection regions can be added. If the detection region is not drawn, the count is the number of people applies to the entire screen.

Note: After switching the detection function, please redraw the detection region.


The screenshot shows the 'Maintenance' settings page with the 'Device' tab selected. Under the 'General' sub-tab, the following settings are visible:

- Reporting Mode:** A dropdown menu set to 'From Now On'.
- Reporting Interval(min):** A text input field containing '10'.
- Detection Function:** A dropdown menu set to 'People Counting'.
- Detection Mode:** A dropdown menu set to 'Auto'.
- Detection Interval:** A dropdown menu set to '2min'.
- Detection trigger sensitivity ⓘ:** A dropdown menu set to 'High'.
- Detection Region:** A label with an 'Edit' button next to it.


Step 3: Click **Add+** to add a region, then drag and drop region vertices to adjust the shape; add region vertices via the plus sign between two points, up to 8 vertices per region. The regions allows overlapping.

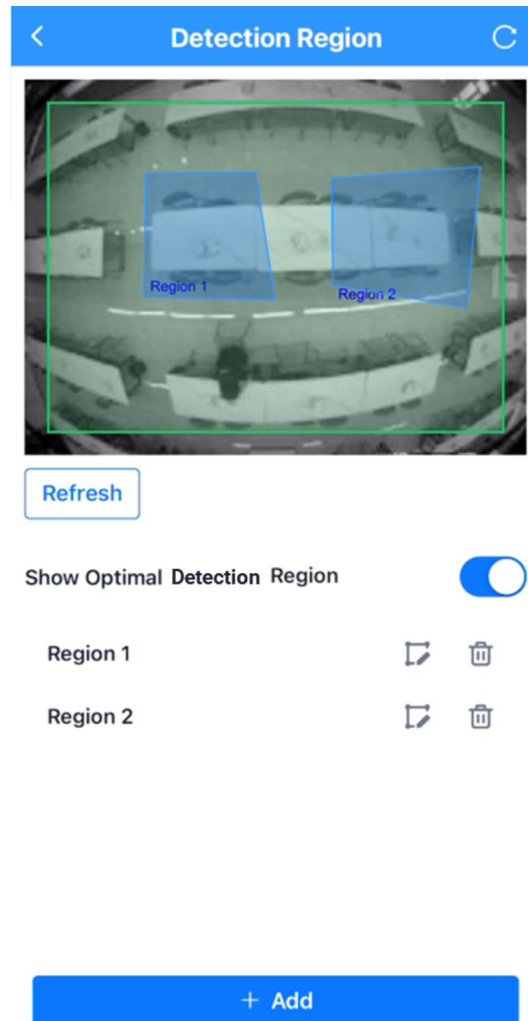


After adding the regions, click the arrow on the upper left corner to save the settings.

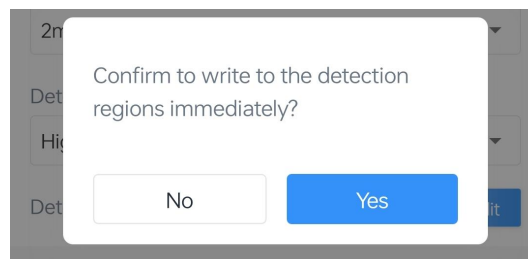


Step 4: Configure [Other Setting](#) and [Threshold Setting](#) as need, or leave them as defaults. After all configuration, click **Write** to save the settings.

Step 5: Switch to homepage, click  to read current device, and click **Refresh** to get the detection status, Detection Status shows the related information.

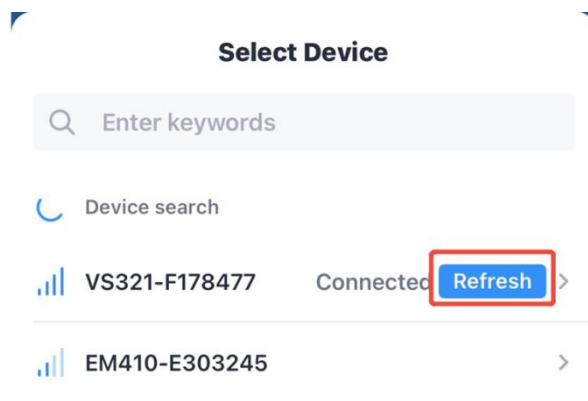

When arrive reporting interval, click **Refresh** again, can see the status value change.

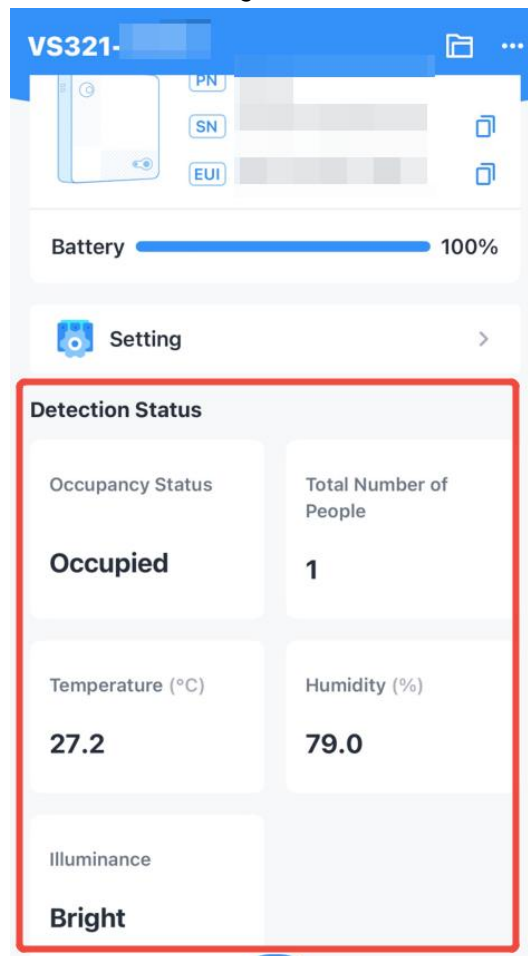

Once the detection interval ends, the total number of people in the regions is displayed. When the number of people in the regions changes from 0 to 1, the occupancy status will change from **Vacant** to **Occupied**.

4.2.2 Desk Occupancy

Desk Occupancy mode can detect every region's occupancy status.

Step 1: Choose Detection Function as **Desk Occupancy**. Set up [detection-related parameters](#).

Step 2: Click **Edit** to draw Detection Regions. Up to 10 detection regions can be added, with at least one required.

Note: After switching the detection function, please redraw the detection region.

Device

Network

General

Threshold

reporting mode

From Now On

Reporting Interval(min)

2

Detection Function

Desk Occupancy

Detection Mode

Auto

Detection Interval

2min


Detection trigger sensitivity ⓘ

High


Detection Region

Edit


Step 3: Click **Add+** to add a region, then drag and drop region vertices to adjust the shape; add region vertices via the plus sign between two points, up to 8 vertices per region. Region overlap is not permitted.

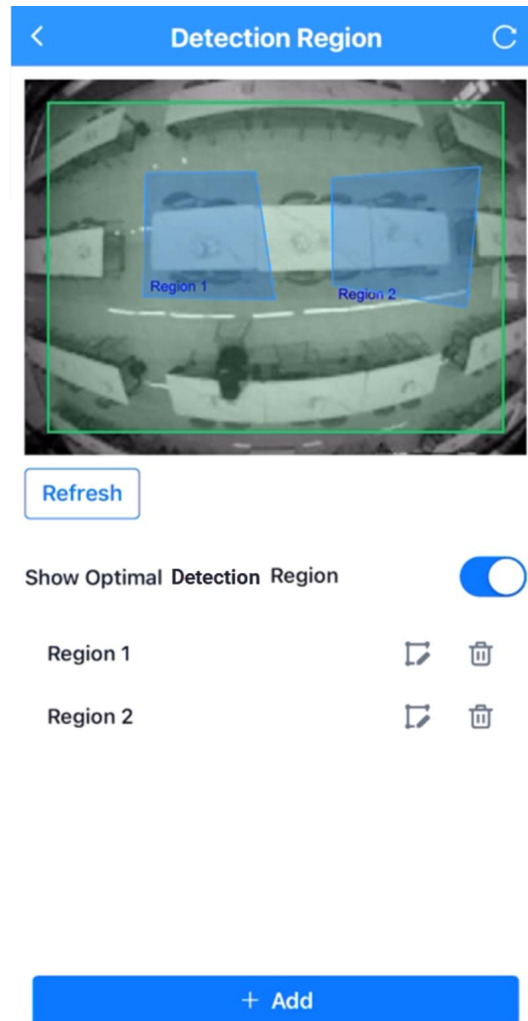


After adding the regions, click on the upper left corner to save the settings.

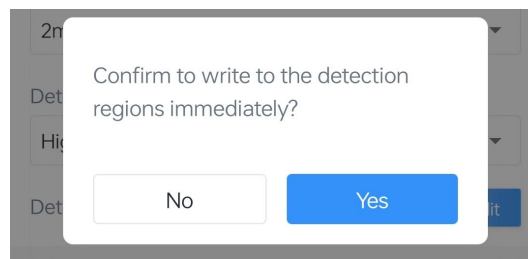


Step 4: Configure [Other Setting](#) and [Threshold Setting](#) as need, or leave them as defaults. After all configuration, click **Write** to save the settings.

Step 5: Switch to homepage, click  to read current device, and click **Refresh** to get the detection status, Detection Status shows the related information.

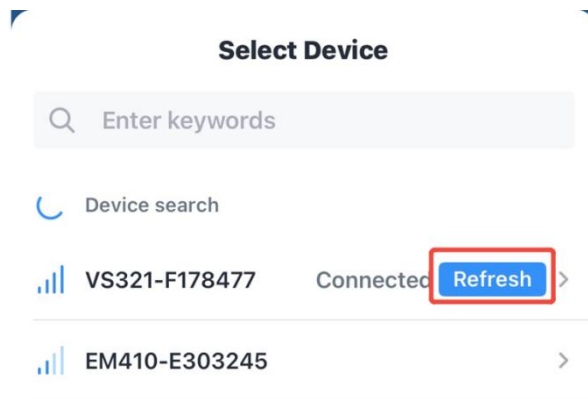

When arrive reporting interval, click **Refresh** again, can see the status value change.

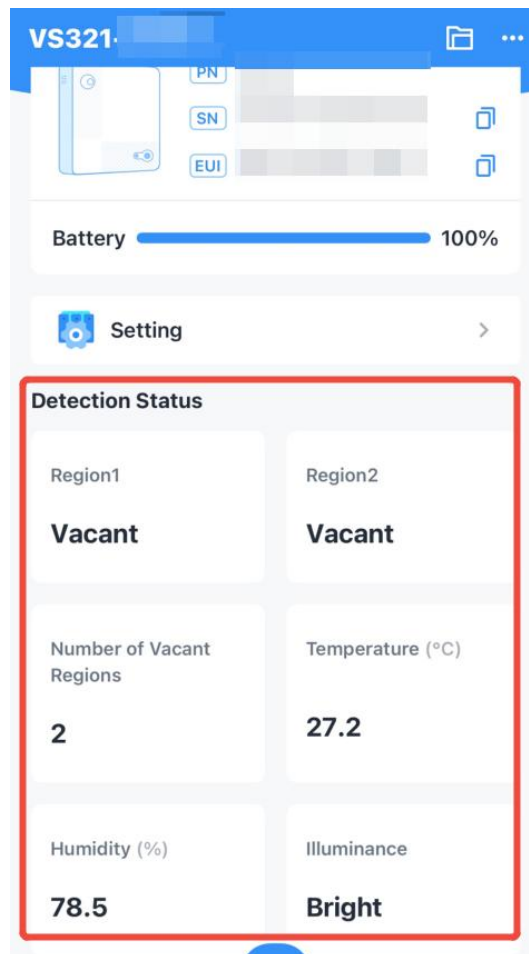

Once the detection interval ends, display the number of vacant regions and the status of each region.

4.2.3 Other Settings

Report-related parameters:

Device

Network

General

Threshold

Reporting Mode

From Now On

Reporting Interval(min)

2

Parameters	Description
Reporting Mode	<p>On the Dot: Report at each integer moment. For example, current time is 0:07, when the interval is set to 10 minutes, it will report at 0:10, 0:20, 0:30, and so on.</p> <p>From Now On: Begin reporting from this moment onwards and regularly report based on the interval cycle.</p>
Reporting Interval	<p>The interval of reporting battery level, temperature, humidity, current total number of people (or regions occupancy status), illuminance status and detection status to network server. Default: 10 min, Range: 2 ~ 1440 min.</p> <p>Note: The reporting interval should be greater than the detection interval.</p>

Detection-related parameters:

Detection Mode

Auto

Detection Interval

2min

Detection trigger sensitivity ⓘ

High

Detection Region

Edit

Parameters	Description
Detection Mode	<p>Whether the device uses PIR trigger detection or RGB constant work detection.</p> <p>Auto: When the PIR senses a person's activity, it will actively scan the state of the detection region at the end of the detection interval; if no one is present during the entire detection interval, this detection will be stopped to save power.</p> <p>Always On: The device has been acquiring images and scanning the state of the detection region, whether or not anyone is in the detection region.</p>

Detection Interval	Set interval for the device to capture images, scan region status and collect sensor data. The results of a detection interval will be available at the conclusion of the interval.
Detection Trigger Sensitivity	Appears when Auto is selected for detection mode. When no one is present and the device triggers detection, it is recommended to turn down the sensitivity. When someone is present, but the device does not detect, it is recommended to turn up the sensitivity.

Other parameters: Set up Time-related settings, Illuminance setting and other general settings.

Hibernate Mode ☒

Hibernate Period 🕒 22:00-09:00 >

Time Zone
UTC+8 (CT/CST: China Standard Time) ▼

Daylight Saving Time ☒

Start Time
Mar. | 2nd | Sun. | 00:00 🕒

End Time
Nov. | 1st | Mon. | 00:00 🕒

DST Bias(min) ⓘ
60

Illuminance Collection ⓘ ☒

Current Light Sensor Value
— — Fetch


Light State, Over(lux) Default
700




Dark State, Below(lux) Default
300

Minimum Detectable Light Sensor Value ⓘ Default
65535

Parameters

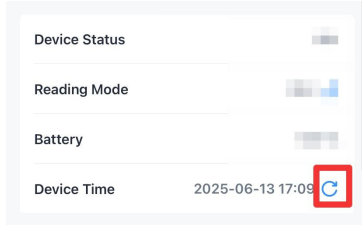Description

Hibernate Mode	<p>Disable or enable hibernate mode to stop detecting and reporting during a period.</p> <p>Hibernate Period: Set the period of hibernate.</p>
Time Zone	<p>Set the time zone of the current location. When you click Sync button of ToolBox App to sync time, the device will also sync the time zone from smartphone automatically.</p> 
Daylight Saving Time	<p>Enable or disable Daylight Saving Time (DST). It only works with this device and does not affect the network server.</p> <p>Start Time: the start time of DST time range.</p> <p>End Time: the end time of DST time range.</p> <p>DST Bias: the DST time will be faster according to this bias setting.</p>
Illuminance Collection	
Current Light Sensor Value	Click Fetch to retrieve the current illuminance value. This value is only for reference.
Light State, Over	If the light is higher than this value, the illuminance status is displayed and reported as Bright .
Dark State, Below	If the light is lower than this value, the illuminance status is displayed and reported as Dim .
Minimum Detectable Light Sensor Value	<p>The device will not be able to detect the light when it is below this value.</p> <p>Note: It is recommended that the ambient illumination be set to above 50 lux to ensure optimal detection performance.</p>
Data Storage	
Data Storage	Disable or enable to store data locally. The stored data can be exported as CSV format file and saved to smartphone via ToolBox.

	<div data-bbox="512 219 965 963"> <p>Device Maintenance</p> <div> <div>History Data</div> <div>Upgrade</div> <div>Restart</div> <div>Reset</div> </div> <div>    </div> </div> <p>Note:</p> <ol style="list-style-type: none"> 1. It is necessary to sync the time to ensure the data is stored in correct time. <div data-bbox="512 1104 1295 1350"> <div> <div>Basic Information</div> <div> <div>PN</div> <div>SN</div> <div>EUI</div> </div> <div>Battery 100%</div> </div> <div> <div>Device Status</div> <div>Reading Mode</div> <div>Battery</div> <div>Device Time 2025-06-13 17:09</div> </div> </div> <ol style="list-style-type: none"> 2. The device will still store the data even the network status is de-activated. 3. ToolBox App can only export the last 14 days' data at most.
Data Retransmission	<p>Enable this feature to ensure the network server can receive all data even if the network is down for some time.</p> <p>Before using this feature, please follow below steps to complete the relevant prerequisites:</p> <p>Step 1: Ensure the data storage is enabled and the device time is correct.</p> <p>Step 2: Go to Setting > Network > LoRaWAN to enable rejoin mode and set the number of packets sent.</p>

Rejoin Mode Set the number of detection signals sent 

For example, the device will send LinkCheckReq MAC packets to the network server regularly to check any network disconnection; if there is no response for 8+1 times, the join status will change to de-active and the device will record a data lost time point (the time it reconnected to the network).

Step 3: Ensure the device is always on-line and powered at all times.

After the network connection is restored, the device will send the lost data from the point in time when the data was lost according to the data retransmission interval (600s by default).

Note:

- 1) If the device is rebooted or re-powered when data retransmission is not completed, the interrupted retransmission data will be retransmitted first after the network is reconnected to the network, and then the newly triggered retransmission data will be transmitted.
- 2) If the network is disconnected again during data retransmission, it will only send the latest disconnection data.
- 3) The retransmission data format is started with "20ce", please refer to section [Historical Data Enquiry](#).
- 4) Data retransmission will increase the uplinks and shorten the battery life.

Other

Bluetooth Name	Customize the Bluetooth name. The default Bluetooth name is VS321-XXXXXXX
Remember your password	Enable to avoid entering the password every time once you connect to Bluetooth.
Change Password	Change the password for ToolBox App to write to this device.

4.3 Threshold Setting

The device can set temperature and humidity threshold. Enable the threshold settings and enter the threshold.

General

Threshold

Temperature threshold

Above(°C)

40

Below(°C)

-5

Humidity Threshold

Above(%)

100

Below(%)

0

Parameters	Description
Temperature Threshold	When the detected temperature is outside the set value or range during the detection interval, the device will send the alarm packet once. Only when the threshold is released and re-triggered, the device will report the threshold alarm packet again.
Humidity Threshold	When the detected humidity is outside the set value or range during the detection interval, the device will send the alarm packet once. Only when the threshold is released and re-triggered, the device will report the threshold alarm packet again.


4.4 Network Settings

4.4.1 LoRaWAN® Settings







Parameters	Description
Device EUI	The device's unique ID that can be found on the label.
App EUI	The default App EUI is 24E124C0002A0001.
Application Port	The port used for sending and receiving data, the default port is 85.

LoRaWAN® Version	V1.0.2 and V1.0.3 are available.
Work Mode	It is fixed as Class A.
Confirmed Mode	If the device does not receive an ACK packet from the network server, it will resend data once.
Join Type	OTAA and ABP modes are available.
Application Key	Appkey for OTAA mode, the default is: 5572404C696E6B4C6F52613230313823.
Rejoin Mode	<p>Reporting interval \leq 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval or every double reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p>Reporting interval $>$ 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p>Note: Only OTAA mode supports rejoin mode.</p>
Set the number of packets sent	<p>When rejoin mode is enabled, set the number of LinkCheckReq packets will be sent.</p> <p>Note: The actual sending number is Set the number of packet sent + 1.</p>
Device Address	DevAddr for ABP mode, default is the 5th to 12th digits of SN.
Network Session Key	Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Application Session Key	Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Supported Frequency	<p>Select supported frequency and select channels to send uplinks.</p> <p>Note: Make sure the channels match the LoRaWAN® gateway.</p>
Channel Index	Enable or disable the frequency to send uplinks.

* Support Frequency

EU868 

Frequency/MHz

868.1	
868.3	
868.5	
867.1	
867.3	
867.5	

If frequency is one of AU915/US915, enter the index of the channel that you want to enable and make them separated by commas.

Examples:

1, 40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicate that all channels are disabled

* Support Frequency

US915

Enable Channel Index ⓘ

0-71

Index	Frequency/MHz ⓘ
0 - 15	902.3 - 905.3
16 - 31	905.5 - 908.5
32 - 47	908.7 - 911.7
48 - 63	911.9 - 914.9
64 - 71	903 - 914.2

ADR Mode	Allow the network server to adjust data rate of the device.
----------	-------------------------------------------------------------

Spread Factor	If ADR is disabled, the device will send data via this spread factor.
TXPower	Transmit power of the device.
RX2 Data Rate	RX2 data rate to receive downlinks or send D2D commands.
RX2 Frequency	RX2 frequency to receive downlinks or send D2D commands. Unit: Hz

Note:

- 1) Please contact sales personnel for device EUI list if there are many units.
- 2) Please contact sales personnel if you need random App keys before purchase.
- 3) Select OTAA mode if you are using Milesight Development Platform to manage devices.

4.4.2 Milesight D2D Settings

Milesight D2D protocol is developed by Milesight and used for connections among Milesight devices without a gateway reducing latency.

Note: Since the minimum detection interval is 2 minutes, the D2D function will be not triggered immediately upon event detection but only after the current at least 2-minute detection interval is completed.

1. Configure RX2 datarate, RX2 frequency and D2D key in LoRaWAN® settings. It is suggested to change the default RX2 frequency to avoid conflicts with other devices and set RX2 datarate **between SF7 and SF10** to ensure better performance.

The screenshot shows two configuration fields. The first is 'RX2 Data Rate' with a dropdown menu currently set to 'DR0 (SF12, 125 kHz)'. The second is 'RX2 Frequency' with a text input field containing the value '869525000'.

2. Enable **D2D Settings**, and set the D2D key to be the same as the setting in D2D agent devices. (Default D2D Key: 5572404C696E6B4C6F52613230313823)

The screenshot shows the 'D2D' settings page. At the top, there are tabs for 'Device' and 'Network', with 'Device' selected. Below the tabs, there are two sub-tabs: 'LoRaWAN' and 'D2D', with 'D2D' selected. Under the 'D2D' tab, there is a toggle switch labeled 'Enable' which is turned on (green). Below the toggle is a text input field labeled 'D2D Key' containing a series of asterisks (*****).

3. Enable the trigger conditions and define different 2-byte hexadecimal control commands (0x0000 to 0xffff).

Example: When Occupied is triggered, VS321 will send a D2D command 0004 to trigger the Milesight D2D agent devices to take actions within 5 minutes.

Occupied ☐

Vacant ☒

Region 1 Occupied ☐

Region 1 Vacant ☐

Region 1 Occupied and Vacant ☐

Control command

4

LoRa Uplink ⓘ ☒

Control Time /min(min) ⓘ ☒

5


Parameters	Description
Status Condition	<p>When device detects one or more of the below statuses, it will send the control command to the corresponding Milesight D2D agent devices:</p> <ul style="list-style-type: none"> ● Occupied ● Vacant ● Region 1 Occupied ● Region 1 Vacant ● ...
Control command	Define a 2-byte hexadecimal control command (0x0000 to 0xffff).
LoRa Uplink	If enabled, a LoRaWAN® uplink packet that contains the information of device status will be sent to gateway after the Milesight D2D control command is sent.
Control Time /min	<p>After receiving commands from VS321, Milesight D2D agent devices will take corresponding actions within this duration.</p> <p>Default: 5 mins, Range: 1~1440 mins</p>

4.5 Maintenance


4.5.1 Backup

The device supports backup templates for quick and easy device configurations in bulk. Backup is allowed only for devices with the same model and LoRaWAN® frequency band.


1. Attach the NFC area of smartphone to the device to read the device.
2. Go to **Settings** page on the App to edit the configuration as required, click **Set Template** to save current configuration as the template in the ToolBox App.

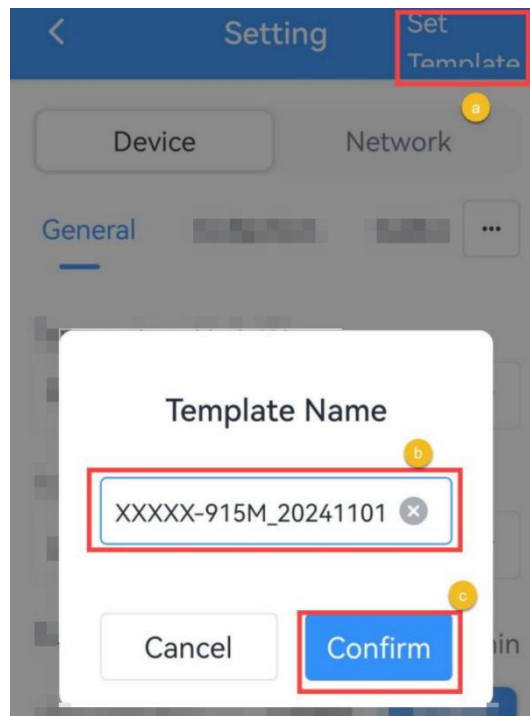

3. Go to **Template** page, select and click the target template, then click **Write** and attach the NFC area of smartphone to the target device to import the configuration.

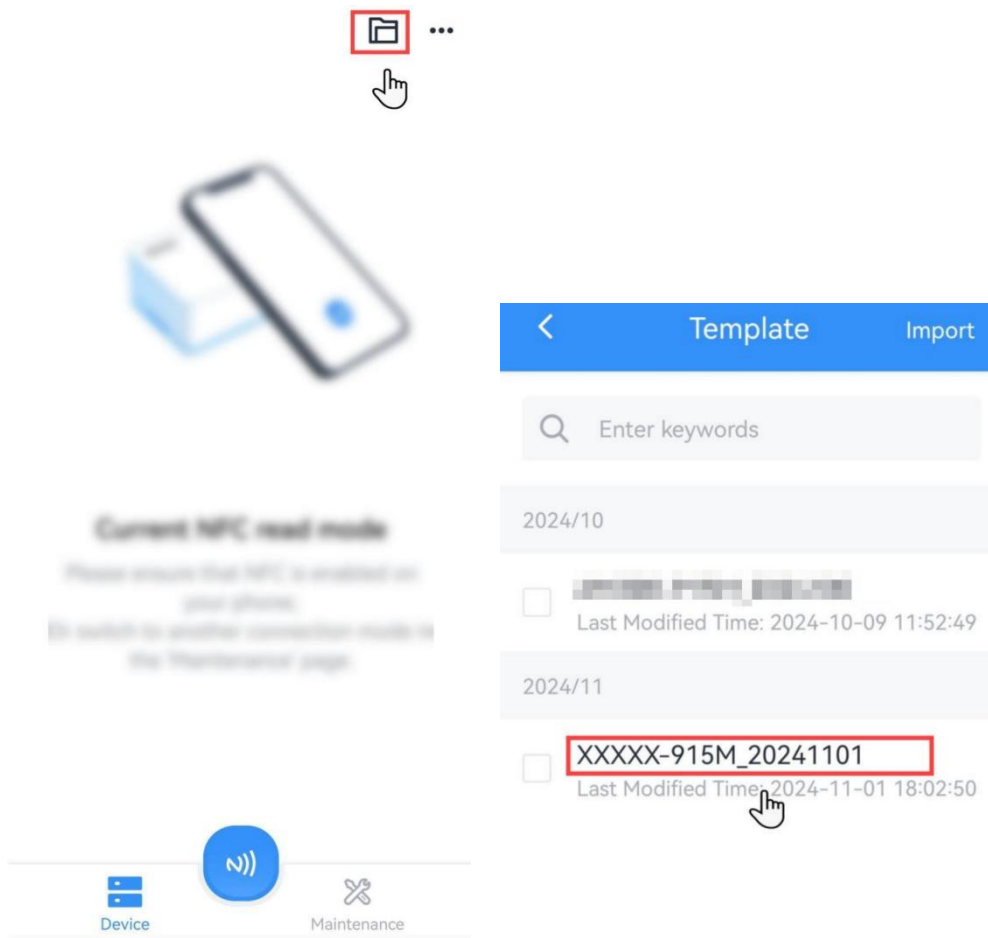


Note: Check the box of target template to delete it, or export this template as JSON format file and save it to the smartphone.

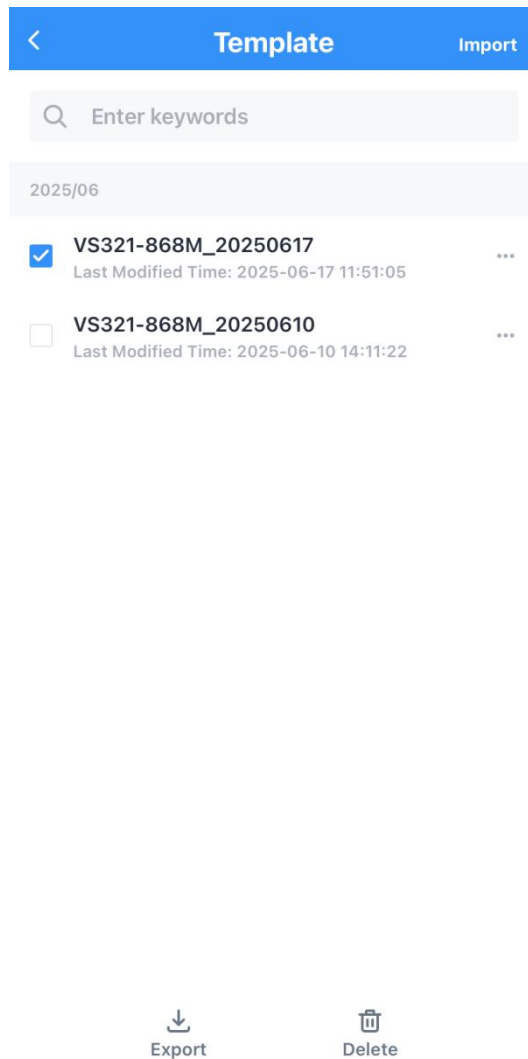

4.5.2 Upgrade

1. Download firmware from the Milesight website to your smartphone.
2. Go to **Maintenance** page of ToolBox App, and tap **Upgrade** to import firmware and upgrade the device.

Note: Operation on ToolBox is not supported during the upgrade.

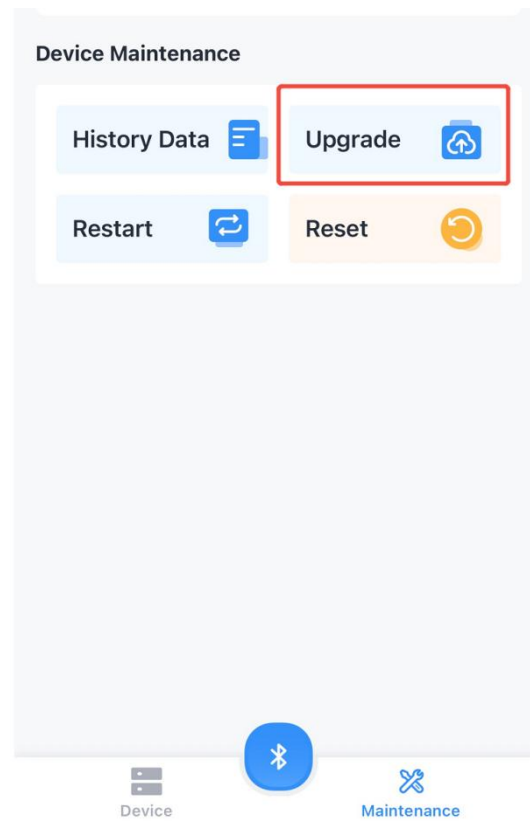


4.5.3 Reset

The device supports two methods to reset the device, which are as follows:

Via Hardware: Press and hold on the device's multi-function button for 10s .

Via ToolBox App: Go to **Maintenance** page to tap **Reset**, then reconnect the device via Bluetooth to complete the reset.

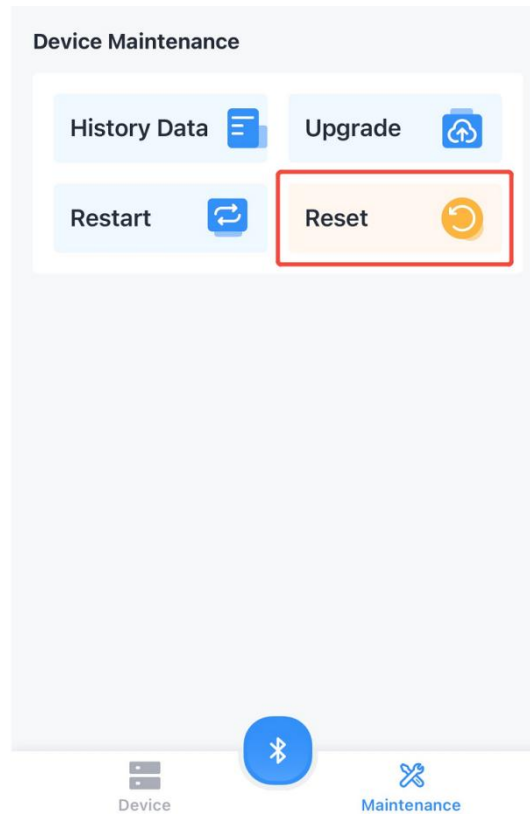

5. Communication Protocol

All messages are based on following format (HEX), the Data field should follow little-endian:

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel3	...
1 Byte	1 Byte	N Byte	1 Byte	1 Byte	N Byte	1 Byte	

For decoder examples please find files on <https://github.com/Milesight-IoT/SensorDecoders>.

5.1 Uplink Data

5.1.1 Basic Information

The device will report a basic information packet whenever joining the network.

Item	Channel	Type	Byte	Description
Device Type	ff	0f	1	00: Class A
TSL Version	ff	ff	2	0100=>1.0
Hardware Version	ff	09	2	01 00 => V1.0
Firmware Version	ff	0a	2	01 01 => V1.1
Device Serial Number	ff	16	8	16 digits
Power On	ff	0b	1	ff

Protocol Version	ff	01	1	01=>V1
Reset Report	ff	fe	1	ff

Example:

ff0f00 ffff0100 ff090100 ff0a0101 ff166443f17847780000 ff0bff ff0101 fffeff					
Channel	Type	Value	Channel	Type	Value
ff	0f (Device Type)	00 (Class A)	ff	ff (TSL Version)	0100 (V1.0)
Channel	Type	Value	Channel	Type	Value
ff	09 (Hardware Version)	0100 (V1.0)	ff	0a (Firmware Version)	0101 (V1.1)
Channel	Type	Value	Channel	Type	Value
ff	16 (Device SN)	6443f178477 80000	ff	0b (Power On)	ff (Reserved)
Channel	Type	Value	Channel	Type	Value
ff	01 (Protocol Version)	01 (V1)	ff	fe (Reset Report)	ff

5.1.2 Periodic Report

The device supports to report below types of periodic report packets.

Item	Channel	Type	Byte	Description
Battery Level	01	75	1	UINT8, Unit: %, [1-100]
Temperature	03	67	2	INT16*0.1, Unit: °C
Humidity	04	68	1	UINT8*0.5, Unit: %RH
People Counting	05	fd	2	UINT16, total number of persons in the detection regions
Desk Occupancy	06	fe	4	Byte 1-2: Enabled status of per region ➤ Bit15-10: 000000; ➤ Bit9-0: 1-Enable, 0-Disable for per bit Byte 3-4: Occupancy status of per region ➤ Bit 15-10: 000000; ➤ Bit 9-0: 1-Occupancy, 0-Vacant

				for per bit
Illumination	07	ff	1	01-Bright, 00-Dim
Detection Status	08	f4	2	Byte1: 02 Byte2: 00-Normal detection, 01-Undetectable
Timestamp	0a	ef	4	Current timestamp, only available when reporting mode is on the dot.

Example:

1. Enable Desk Occupancy mode and the reporting mode is from now on.

017564 03671101 07ff00 08f40200 04686a 06fe03000200		
Channel	Type	Value
01	75 (Battery Level)	64 => 100%
03	67 (Temperature)	1101 => 0111 => 27.3°C
07	ff(Illumination)	00=>Dim
08	f4(Detection Status)	02 00=>Normal detection
04	68(Humidity)	6a=>106*0.5=53%RH
06	fe(Desk Occupancy)	03 00=>00 03=>00000000 00000011=>Enable 2 regions 02 00=>00 02=>00000000 00000010=> Region 2 is Occupied, Region 1 is Vacant.

2. Enable People Counting mode and the reporting mode is on the dot.

0aef94715568 07ff00 08f40200 05fd0300 017564 03671301 046880		
Channel	Type	Value
0a	ef (Timestamp)	94715568=>68557194=>1750430100s=2025-06-20 22:35:00
07	ff(Illumination)	00=>Dim
08	f4(Detection Status)	02 00=>Normal detection
05	fd(People Counting)	03 00=>00 03=>3=>Total number of persons in the current regions is 3
01	75 (Battery Level)	64 => 100%
03	67 (Temperature)	1301 => 0113 => 27.5°C
04	68(Humidity)	80=>128*0.5=64%RH

5.1.3 Alarm Report

The device supports to report below types of alarm report packets.

Item	Channel	Type	Byte	Description
Temperature Threshold	83	67	3	Byte 1-2: INT16*0.1, Unit: °C Byte 3: 01-Threshold Alarm, 00-Threshold Alarm Release

Humidity Threshold	84	68	2	Byte 1: UINT8*0.5, Unit: % Byte 2: 01-Threshold Alarm, 00-Threshold Alarm Release
--------------------	----	----	---	-----------------------------------------------------------------------------------------

Example:

8367 1301 01		
Channel	Type	Value
83	67 (Temperature Threshold)	1301=> 0113=275*0.1=27.5 °C 01-Threshold Alarm

5.1.4 Historical Data

The device will report retransmission data or stored data as below example.

Item	Channel	Type	Byte	Description
Historical Data	20	ce	9	Byte 1-4: Timestamp Byte 5: 01-People Counting Byte 6-7: Total number of people Byte 8-9: 0000
				Byte 1-4: Timestamp Byte 5: 00-Desk Occupancy Byte 6-7: Enable status of per region, ➤ Bit 15-10: 000000; ➤ Bit 9-0: 1-Enable, 0-Disable for per bit Byte 8-9: Occupancy status of per region, ➤ Bit 15-10: 000000; ➤ Bit 9-0: 1-Occupancy, 0-Vacant for per bit

Example:

20ce e81b4466 01 0500 0000		
Channel	Type	Value
20	ce	e81b4466 => 6644b1e8 = 1715778024s = 2024-5-15 21:00:24 01 => People Counting 0500=> 0005=5=>Total number of people

5.2 Downlink Data

This device supports downlink commands for configuration and control. The downlink application port is 85 by default.

5.2.1 General Setting

Item	Channel	Type	Byte	Description
Reporting Mode	f9	10	1	00-Form now on, 01-On the dot
Detection Mode	f9	6b	1	00-Auto, 01-Always
Immediate Detection	f9	6c	1	ff
Reset	f9	6e	1	ff
Reboot	ff	10	1	ff
Reporting Interval	ff	8e	3	Byte 1: 00 Byte 2-3: Interval, [2~1440], Unit: min
Detection Interval	ff	02	2	UNIT 16, [2~60], Unit: min
Illuminance Collection	ff	06	9	Byte1: 1c Byte2-3: Dark State, UINT16, Unit: lux, Byte4-5: Light State, UINT16, Unit: lux Byte6-9: 00000000
Data Storage	ff	68	1	01-Enable, 00-Disable
Data Retransmission	ff	69	1	01-Enable, 00-Disable
Retransmission Interval	ff	6a	3	Byte 1: 00 Byte 2-3: Interval time, unit: s, [30~1200], Default: 600

Example:

1. Set Reporting Interval as 5 min.

ff8e 00 0500		
Channel	Type	Value
ff	8e	0200=> 0005=5min

2. Set Detection Interval as 2 min.

ff02 0200		
Channel	Type	Value
ff	02	0200=> 0002=2min

3. Set Over 800 lux as Light Status and Below 200 lux as Dark Status.

ff06 1c 0002 2003 00000000		
Channel	Type	Value
ff	06	c800=> 00c8=200 2003=>0320=> 800 lux

4. Enable data storage feature.

ff6801		
Channel	Type	Value
ff	68	01=Enable

5.2.2 Threshold Setting

Item	Channel	Type	Byte	Description
Threshold setting	ff	06	9	<p>Byte1:</p> <ul style="list-style-type: none"> ➤ Bit 2-0: 000-disable; 001-below; 010-over; 011-within; 100-below or over ➤ Bit 5-3: 001-Temperature, 010-Humidity ➤ Bit 7-6: 00 <p>Byte2-3: Min. Value</p> <ul style="list-style-type: none"> ➤ Temperature, INT16*0.1, Unit: °C ➤ Humidity, UINT16*0.5, Unit: %RH <p>Byte4-5: Max. Value</p> <ul style="list-style-type: none"> ➤ Temperature, INT16*0.1, Unit: °C ➤ Humidity, UINT16*0.5, Unit: %RH <p>Byte6-9: 00000000</p>

Example:

1. Set Temperature Threshold as below 5°C or over 37°C.

ff06 0c 3200 7201 00000000		
Channel	Type	Value
ff	06	<p>Byte 1: 00001100=>0c</p> <p>Byte 2: 3200=> 0032 => 50*0.1=5°C</p> <p>Byte 3: 72 01=> 01 72 => 370*0.1=37°C</p>

5.2.3 LoRaWAN® Setting

Modifying the following parameters triggers the device to re-enter the network.

Item	Channel	Type	Byte	Description
ADR Mode	ff	40	1	01-Enable, 00-Disable
Application Port	ff	65	1	[1-223], Default:85

Example:

1. Set Application Port as 85.

ff65 55		
Channel	Type	Value
ff	65	55=> 85

5.2.4 Milesight D2D Setting

Item	Channel	Type	Byte	Description
Milesight D2D Feature	ff	84	1	01-enable, 00-disable
Milesight D2D Key	ff	35	8	First 16 digits, last 16 digits are fixed as 0
Milesight D2D Settings	ff	96	8	Byte 1: People Counting: 01-Occupied 02-Vacant 03-Dim 04-Occupied/Bright 05-Occupied/Dim Desk Occupancy: 01-Region 1 Occupied 02-Region 1 Vacant 03-Region 2 Occupied 04-Region 2 Vacant ... 13-Region 10 Occupied 14-Region 10 Vacant Byte 2: 01-enable, 00-disable

				Byte 3: 01-enable LoRa Uplink, 00-disable LoRa Uplink Byte 4-5: D2D control command Byte 6-7: control time, Unit: min Byte 8: 01-enable control time, 00-disable control time
--	--	--	--	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

1. Set Milesight D2D settings.

ff96 03 01 01 04e0 0500 01		
Channel	Type	Value
ff	96	03=> Dim; 01=>Enable; 01=>Enable LoRa Uplink; 04 e0=>e0 04, Control Command is e0 04; 05 00=>00 05, Control time is 5 mins; 01=>Enable Control Time

5.2.5 Historical Data Enquiry

The device supports data retrievability feature to send downlink command to enquire the historical data stored in the device. Before that, ensure the device time is correct and data storage feature was enabled to store data.

Command format:

Item	Channel	Type	Byte	Description
Enquire data at a certain point in time	fd	6b	4	Unix timestamp
Enquire data in time range	fd	6c	8	Byte 1-4: Start time, Unix timestamp Byte 5-8: End time, Unix timestamp
Stop query data report	fd	6d	1	ff
Retrievability Interval	ff	6a	3	Byte 1: 01 Byte 2-3: Interval time, unit: s, [30~1200], Default: 600

Reply format:

Channel	Type	Byte	Description
---------	------	------	-------------

fc	6b/6c	1	00: data enquiry success; 01: time point or time range invalid; 02: no data in this time or time range.
20	ce	9	Byte 1-4: Timestamp Byte 5: 01-People Counting Byte 6-7: Total number of people Byte 8-9: 0000
			Byte 1-4: Timestamp Byte 5: 00-Desk Occupancy Byte 6-7: Enable status of per region, ➤ Bit 15-10: 000000; ➤ Bit 9-0: 1-Enable, 0-Disable for per bit Byte 8-9: Occupancy status of per region, ➤ Bit 15-10: 000000; ➤ Bit 9-0: 1-Occupancy, 0-Vacant for per bit

Note:

1. The device only uploads no more than 300 data records per range inquiry.
2. When enquiring about the data in time point, it will upload the data that is the closest to the search point within the reporting interval range. For example, if the device's reporting interval is 10 minutes and users send a command to search for 17:00's data, if the device finds there is data stored in 17:00, it will upload these data. If not, it will search for data between 16:50 to 17:10 and upload the data which is the closest to 17:00.

Example:

1. Enquire historical data of temperature version device between 2024/5/15 10:20:22 to 2024/5/20 10:20:22.

fd6c e61b4466 66b34a66		
Channel	Type	Value
fd	6c	Start time: e61b4466 => 66441be6 = 1715739622s =2024/5/15 10:20:22 End time: 66b34a66 => 664ab366 = 1716171622s =2024/5/20 10:20:22

Reply:

fc6c00		
Channel	Type	Value
fc	6c	00: data enquiry success

20ce e81b4466 01 0500 0000			
Channel	Type	Time Stamp	Value
20	ce	e81b4466 => 6644b1e8 = 1715778024s = 2024-5-15 21:00:24	01 => People Counting 0500=> 0005=5=>Total number of people

-----END-----